



# Master Set Up for Heat Pump and or Master Remote in Heat Recovery Zone

BRC1D & BRC2A

On start up, a Master Controller must be selected. After Check Operation mode completes, all “Mastered Controlled” icons will be flashing on wired controllers only, see pages 43 & 44 for wireless controllers. The first control who’s “MODE” button is pushed becomes the Master Control. Only the Master can select cool or heat operation.

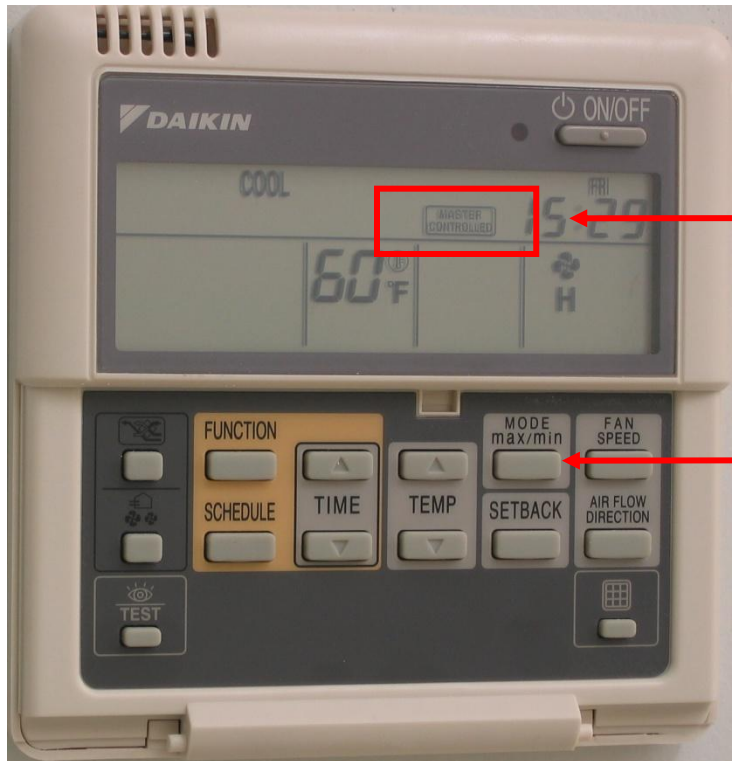

BRC1D

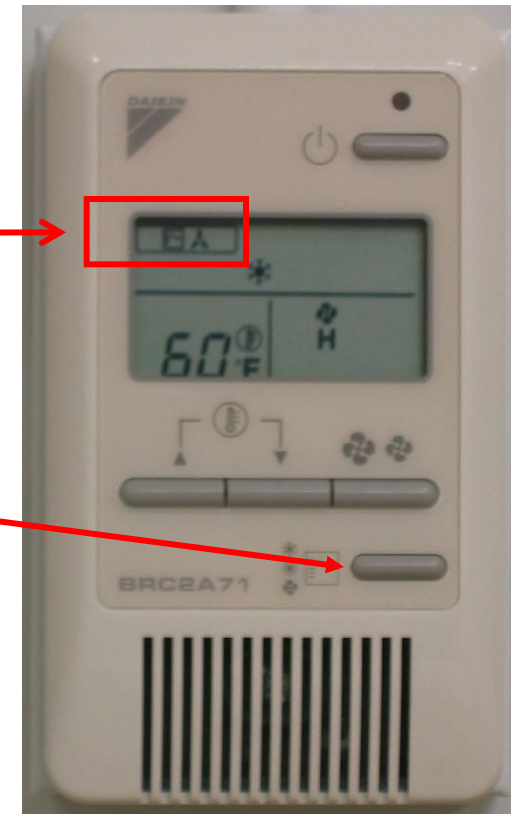

BRC2A

Master Controller Icon denotes slave controller on Zone. Remote Controller that is missing icon is Master

Mode